 
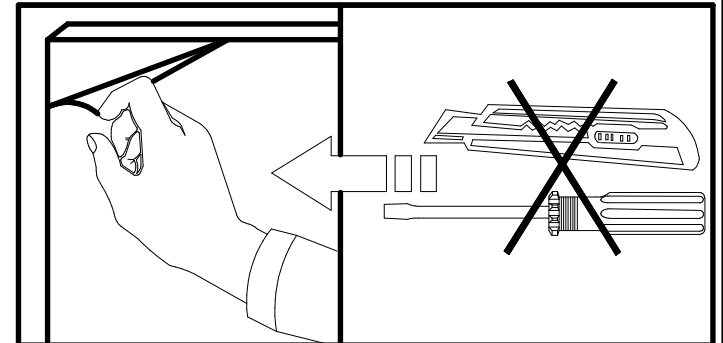 
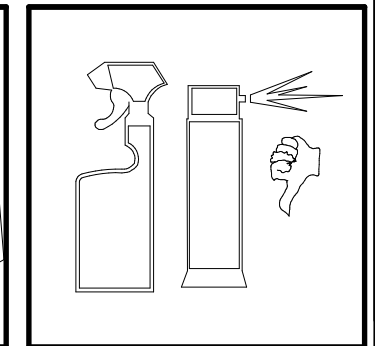 
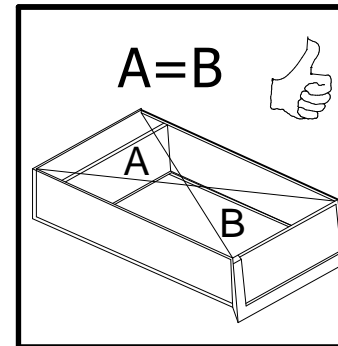 
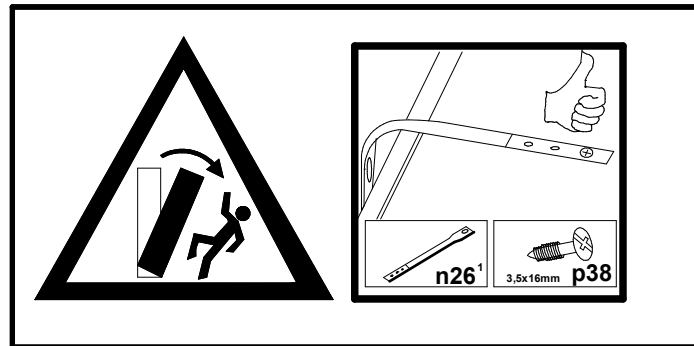 
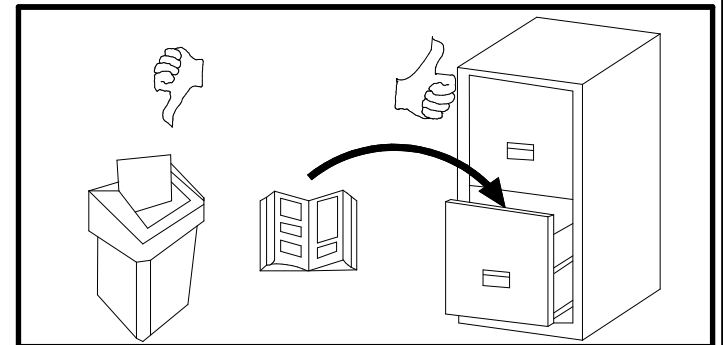 
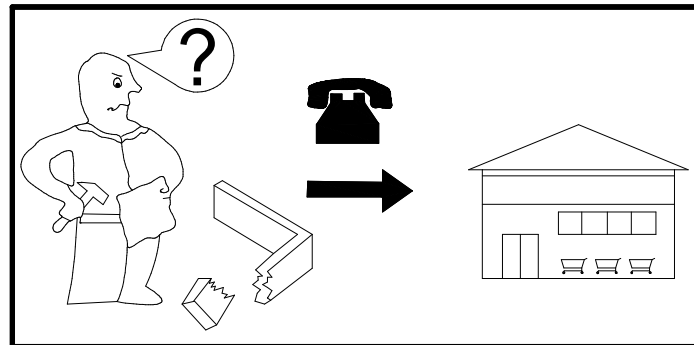 
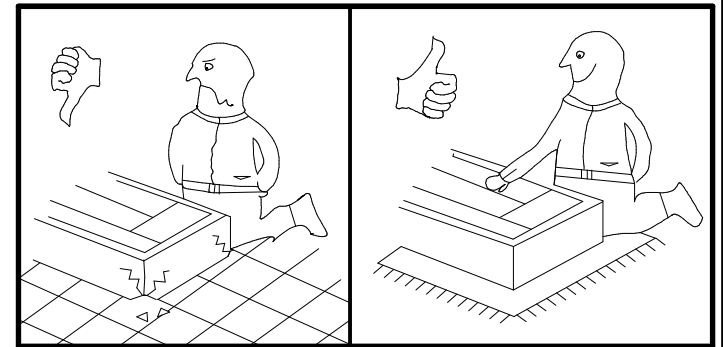 













- (D)** Montageanleitung
- (NL)** Handleiding voor de montage
- (TR)** Montaj talimatı
- (FR)** Instructions de montage
- (CZ)** Montážní návod
- (HU)** Összeszerelési útmutató
- (GB)** Assembly instructions
- (PL)** Instrukcja montażu
- (RU)** Инструкция по монтажу
- (IT)** Istruzioni di montaggio
- (RO)** Instructiuni de asamblare
- (SK)** Montážny návod

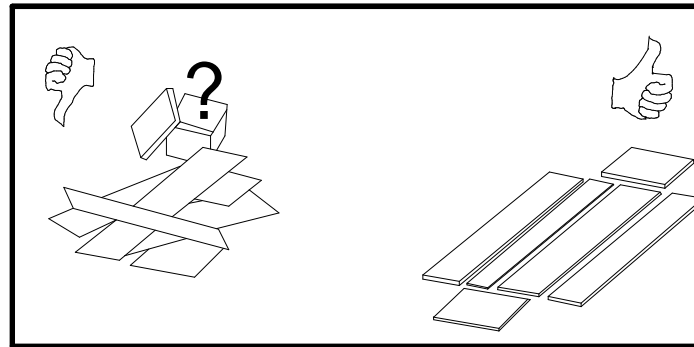


A**S504-P/2/11**

2 / 4



A	B	C1	C2	C3	D
1	S504-3010	1044	180	15	1/1
2	S504-4301	200	1050	16	1/1

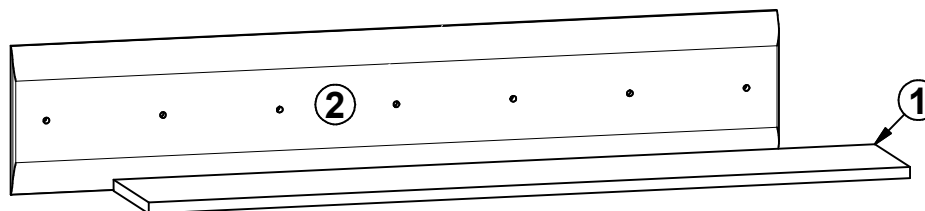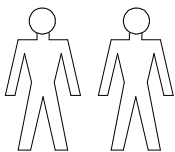           


1 §2

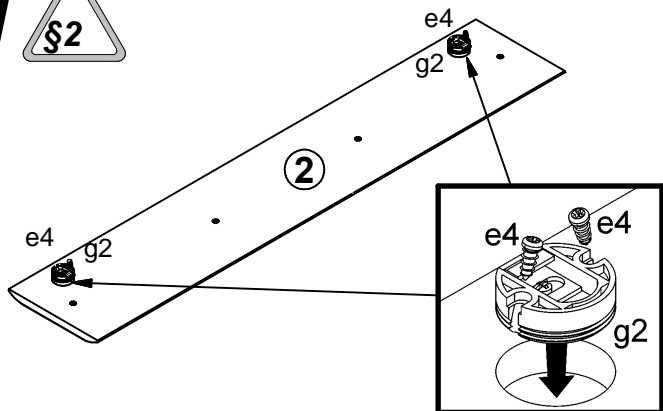 




2 §6

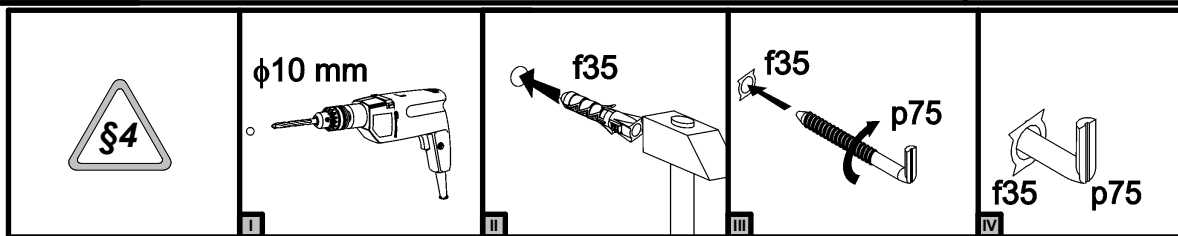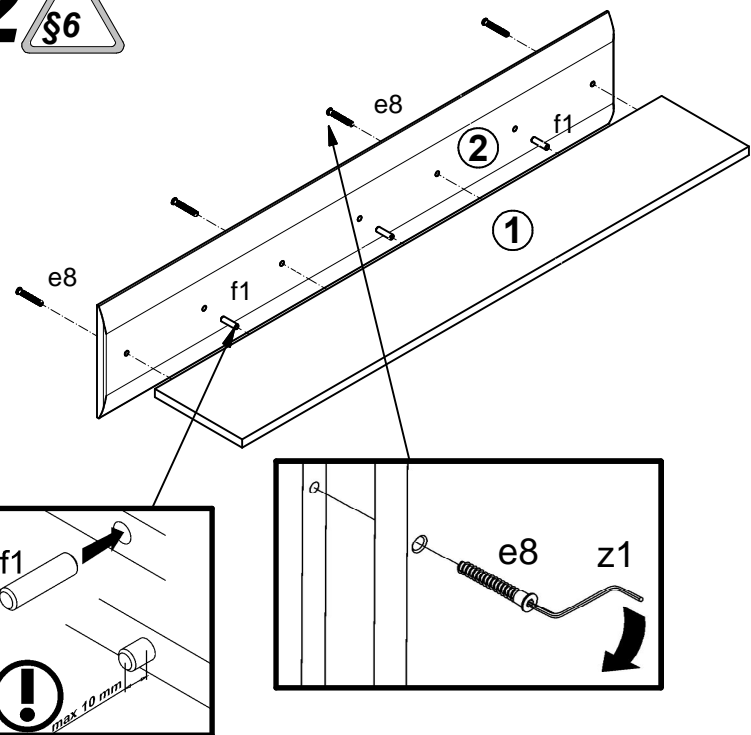  




3

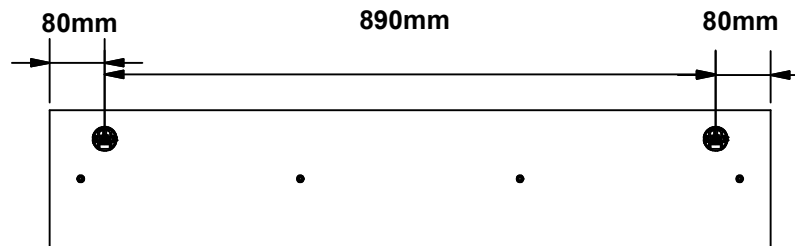 

4

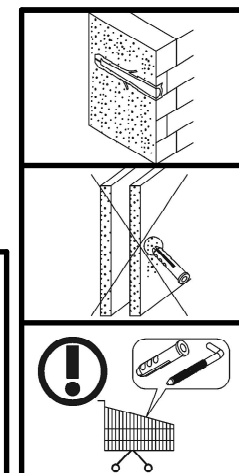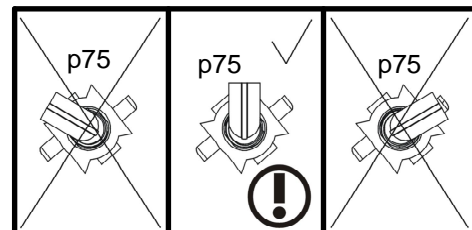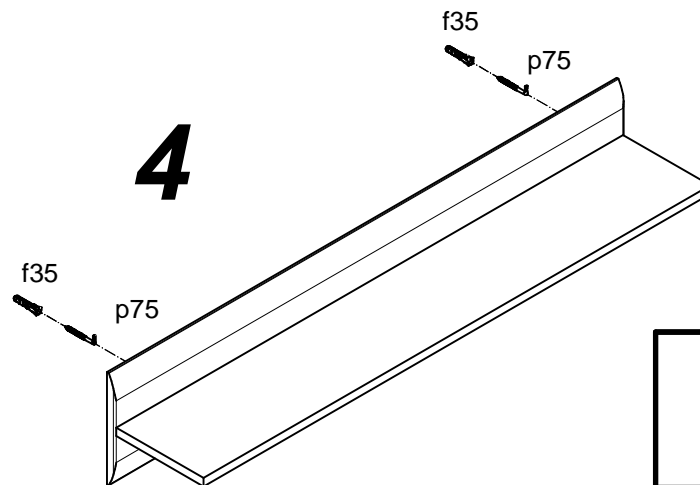   

5

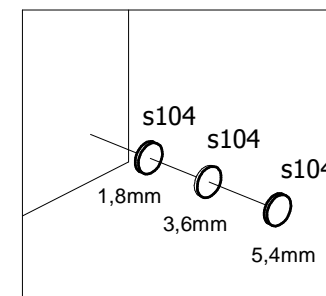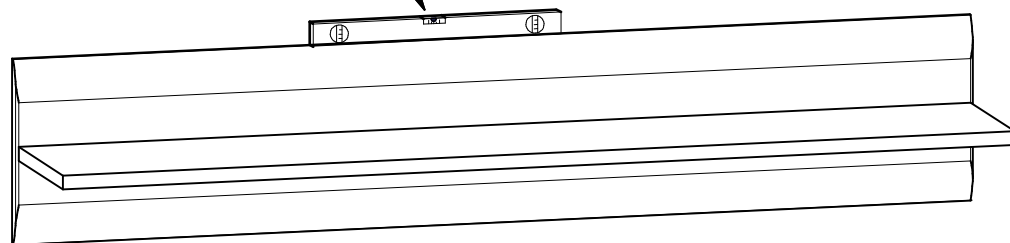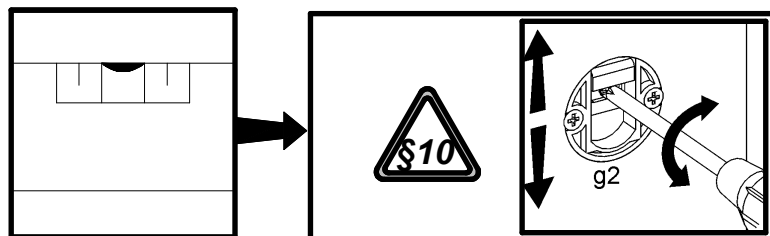   **Pflegehinweis!**

Bitte nur mit einem Staubtuch
(kein Microfasertuch) oder
einem feuchten Lappen reinigen.
KEINE scheuernden Putzmittel
verwenden!

Wskazówka dotycząca pielęgnacji!

Proszę czyścić tylko suchą lub lekko
wilgotną szmatką do kurzu. Nie używać
żadnych środków szorstkich!

