






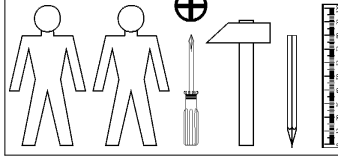

Do montázu potřebné są:  
 Nezbytné během montáže:  
 You need for fitting-up:  
 Az Összeszereléshez szükséges:  
 Počas montáže potrebne:



A	B	C1	C2	C3	D
1	S41-0025	1486	396	16	4/7
2	S41-0026	1486	396	16	4/7
3	S41-0027	323	796	16	5/7
4	S41-1043	1820	559	15	1/7
5	S41-1044	1820	559	15	1/7
6	S41-2026	957	626	47	3/7
7	S41-2027	935	616	38	3/7
8	S41-3023	839	555	22	2/7
9	S41-5007	1820	47	32	6/7
10	S41-9313	1844	857,	2,5	1/7
11	WSP-9307	776	508	2,5	2/7
12	ZS7-501	500	180	12	2/7
13	ZS7-502	500	180	12	2/7
14	ZS7-5049	754	180	15	2/7
15	dr-833	833	24		3/7

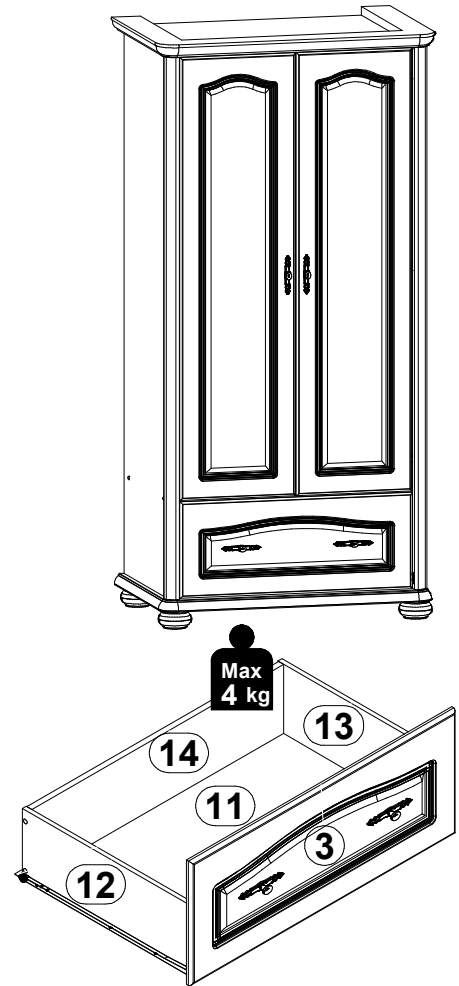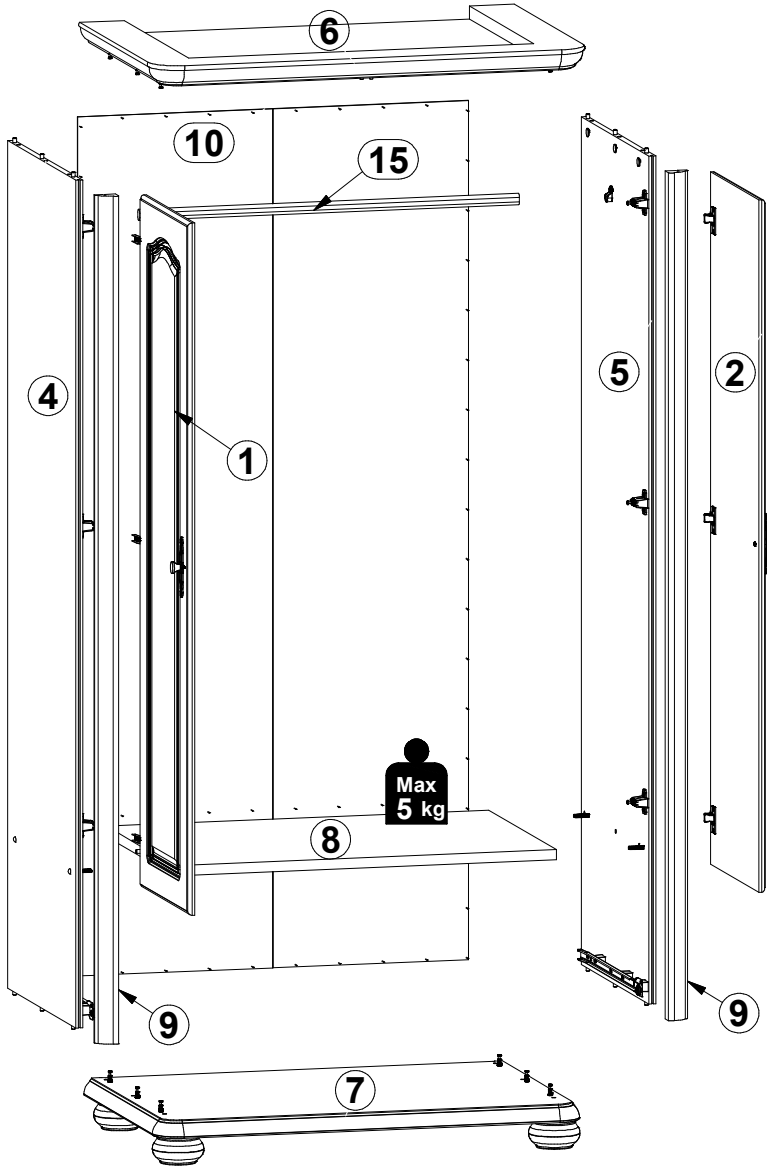

6x a172	6x b85	4x c69	2x d4 φ6,3x15 mm	4x e1 φ7x50 mm	6x e16 φ6x30 mm	6x e19 φ5x9 mm	2x f9 Ø6x30 mm	18x f1 φ8x30 mm
12x f11 46x18x4 mm	4x f25 φ6,5x40 mm	4x f27 φ10x40 mm	4x j8 M4x25 mm	4x k47 φ110x58/62 mm	70x l1	2x n1	2x p1 φ3,5x13 mm	1x p25 φ3,5x16 mm
12x p51 φ3,5x15 mm	12x r1 φ1,5x12mm #16	4x r15 φ1,2x10,5mm #12	16x r42 2011	4x s1	6x s2 Ø16	1x t34 500 mm	1x w26 <sup>CL</sup> 500 mm	1x w26 <sup>CR</sup> 500 mm
1x w26 <sup>DL</sup> 500 mm	1x w26 <sup>DR</sup> 500 mm	6x w36 h=18 mm	1x y1/2 30g	1x z1	1x p35 Ø3,5x10 mm			
			2x p17 Ø5x60 mm	2x n14/2 88x21x15/1,5	2x f35 Ø10x50 mm	4x p38 Ø3,5x16 mm		

