

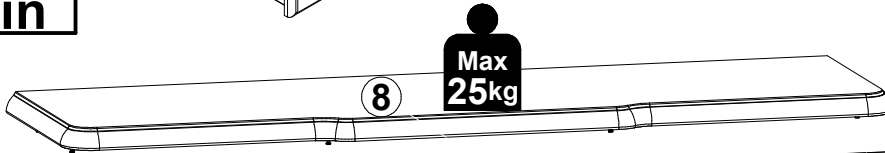
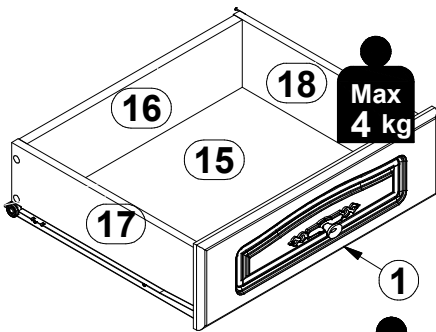


A	B	C1	C2	C3	D
1	S41-0008	138	446	16	3/5
2	S41-0010	704	396	16	3/5
3	S41-0011	704	396	16	3/5
4	S41-0012	560	446	16	3/5
5	S41-1010	710	358	15	1/5
6	S41-1012	710	375	15	1/5
7	S41-1013	710	375	15	1/5
8	S41-2006	1480	436	38	2/5
9	S41-2007	1480	436	38	2/5
10	S41-3003	488	343	15	1/5
11	S41-3005	433	343	15	1/5
12	S41-5002	710	47	32	4/5
13	S41-9315	752,	501,	2,5	1/5
14	S41-9304	752,	449,	2,5	1/5
15	WSP-9303	908,	358	2,5	1/5
16	ZS7-5045	403	110	15	1/5
17	ZS7-521	350	110	12	1/5
18	ZS7-522	350	110	12	1/5

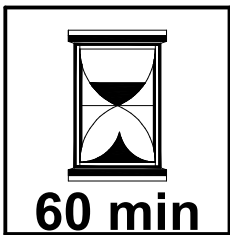

Do montázu potrebné są:
 Nezbytné během montáže:
 You need for fitting-up:
 Az összeszereléshez szükséges:
 Počas montáže potrebné:

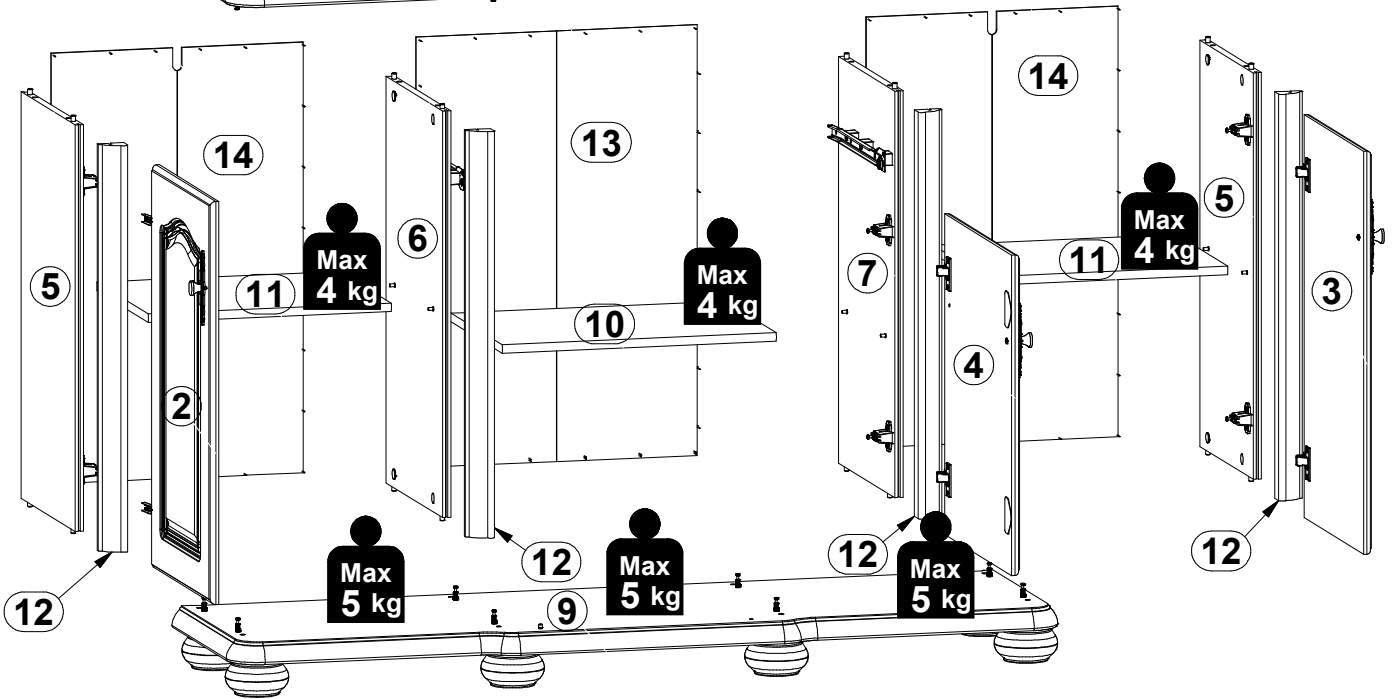

6x a172	6x b85	4x c69	12x d1	3x d4	6x e16	4x e19	1x y12	16x f1
2x f9	12x f11	4x f25	6x f27	4x j8	6x k47	72x l1	12x p51	16x r1
4x r15	20x r42	16x s2	2x s4	6x w36	1x w45 ^{CL}	1x w45 ^{CR}	1x w45 ^{DL}	1x w45 ^{DR}
2x s71					2x p17	2x n142	2x f35	4x p38

