

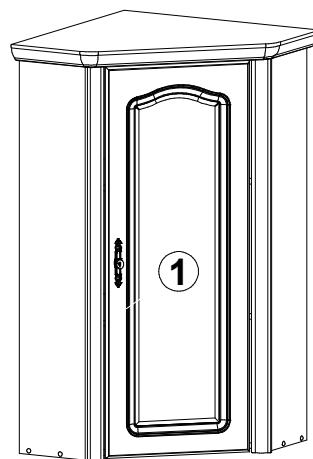
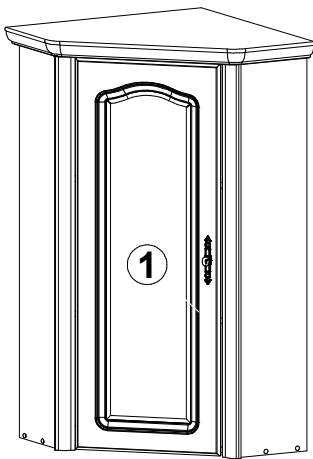


A	B	C1	C2	C3	D
1	S41-0018	1054	396	19	3/5
2	S41-1025	1060	210	33	1/5
3	S41-1026	1060	210	33	1/5
4	S41-2016	600	600	47	2/5
5	S41-3011	537	537	15	1/5
6	S41-3012	537	537	15	1/5
7	S41-4003	1060	120	15	1/5
8	S41-5006	1060	47	32	4/5
9	S41-9003	1070	545	2,5	1/5

Do montázu potrebne są:  
 Nezbytné během montáže:  
 You need for fitting-up:  
 Az Összeszereléshez szükséges:  
 Počas montáže potrebne:

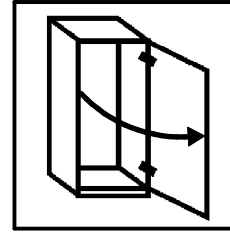

2x  a10	2x  b3	1x  c69	12x  d1 φ5x17 mm	1x  d4 φ6,3x15 mm	5x  e1 φ7x50 mm	4x  e2 φ6,3x13 mm	8x  f1 φ8x30 mm	6x  f11 46x18¼ mm
1x  j8 M4x25 mm	70x  l1	2x  n52 φ2x12/1mm	6x  p25 φ3,5x16 mm	5x  p38 φ3,5x16 mm	4x  p51 φ3,5x15 mm	5x  r1 φ1,5x12mm #16	5x  r42 20/1	4x  s1
4x  s2 φ16	2x  y1\1 30g	1x  z1	2x  s71 φ35x62x40x10	1x  p17 Ø5x60 mm	1x  n14\2 86x21x15/1,5	1x  f35 Ø10x50 mm	2x  p38 Ø3,5x16 mm	

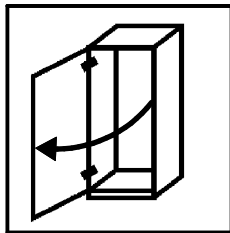